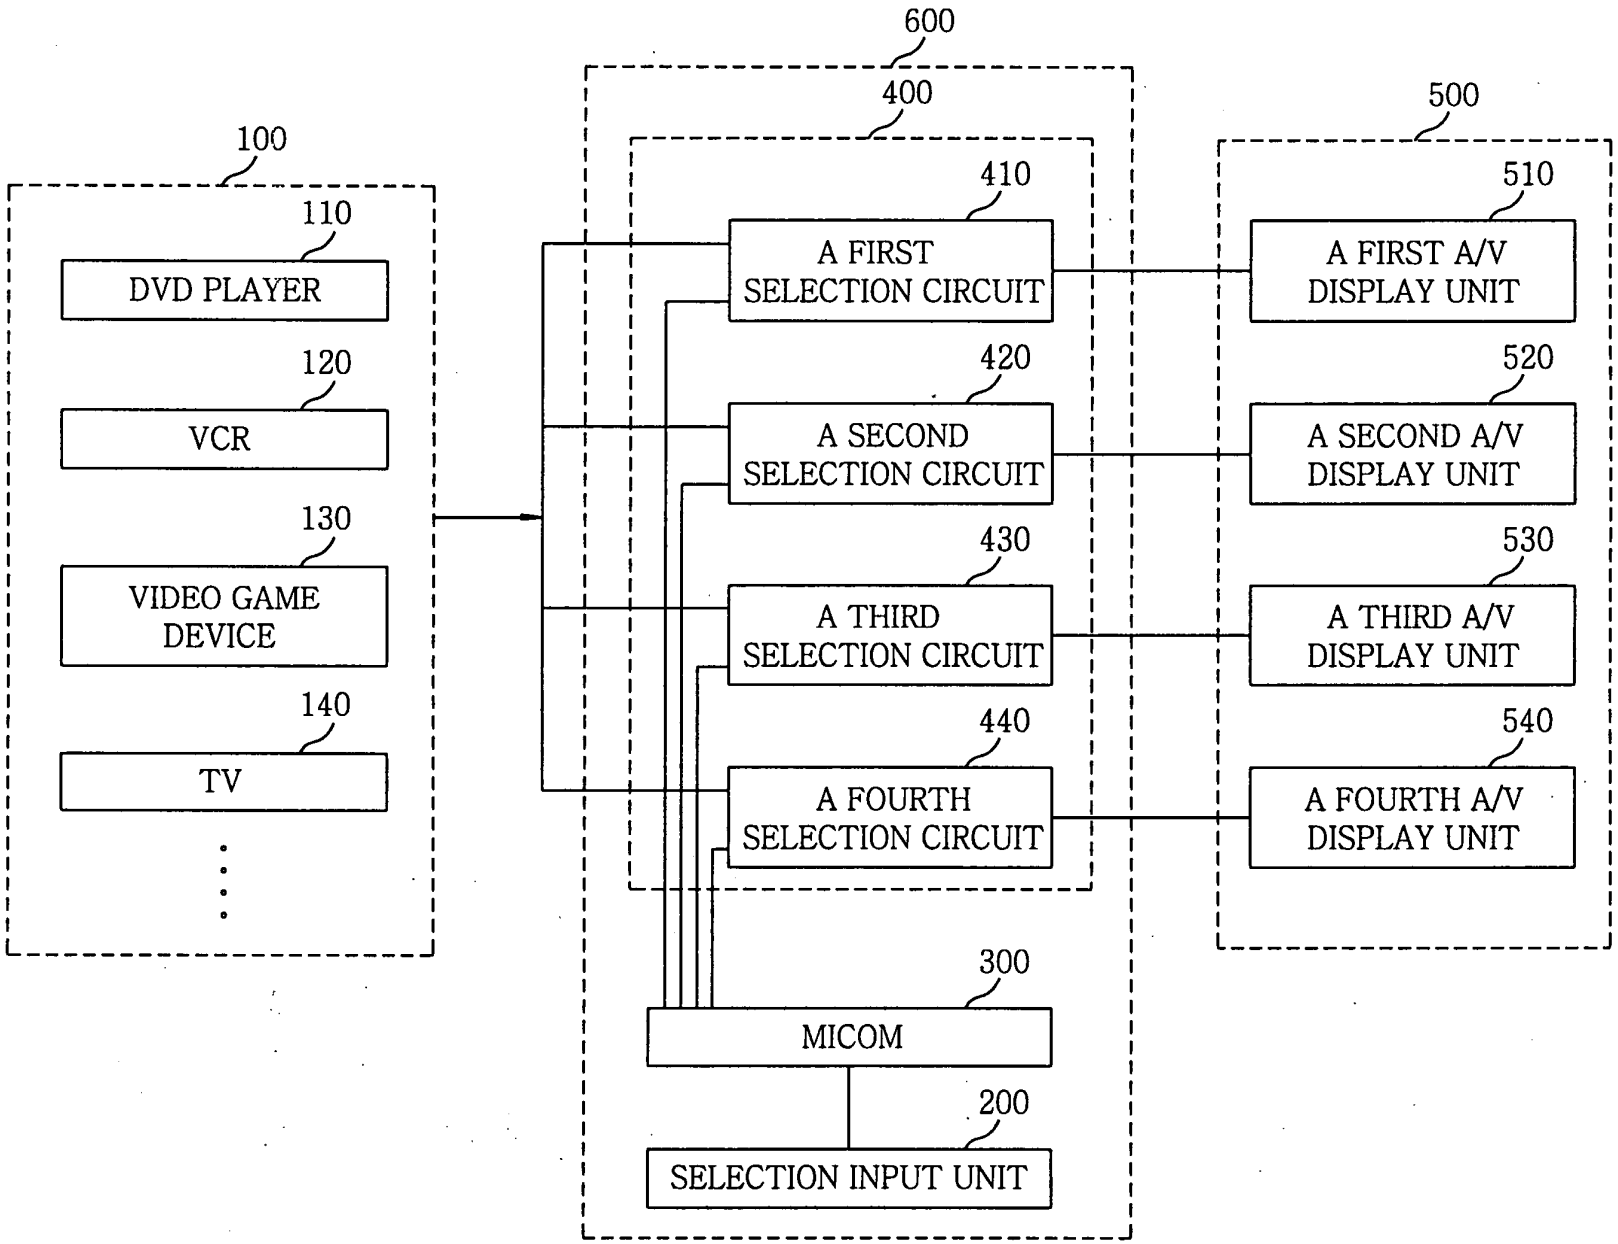
600
400
500
100
410
510
110
A FIRST SELECTION CIRCUIT
A FIRST A/V DISPLAY UNIT
DVD PLAYER
420
520
120
A SECOND SELECTION CIRCUIT
A SECOND A/V DISPLAY UNIT
VCR
430
530
130
A THIRD SELECTION CIRCUIT
A THIRD A/V DISPLAY UNIT
VIDEO GAME DEVICE
440
540
140
A FOURTH SELECTION CIRCUIT
A FOURTH A/V DISPLAY UNIT
TV
300
MICOM
200
SELECTION INPUT UNIT